


Flanges and fasteners should be completely covered with VaproLiqui-Flash

**PANELSHIELD<sup>™</sup> SA**  
**BY VAPROSHIELD**

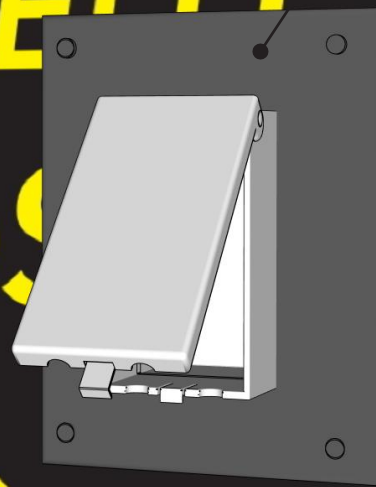

**For all penetrations: tool VaproLiqui-Flash evenly at least 2" onto the face and at least 1" out along all sides of the penetration**

**PANELSHIELD<sup>™</sup> SA**  
**VAPROLIQUI-FLASH<sup>™</sup>**

**PRODUCT DESCRIPTION**  
 VaproLiqui-Flash is a liquid applied, vapor permeable, waterproof, air barrier flashing system component for window and door rough openings. VaproLiquiFlash is designed to work with VaproFlashing and VaproShield field membranes as a complete system.

**DISCLAIMER**  
 Detail sketch is generic, representing suggested best practices for VaproShield materials, and does not represent a specific job site condition and therefore may not be applicable to certain projects. Detail sketch is designed for use as a reference and must be approved by the designer/ consultant of record for each project prior to installation by the subcontractor. Changes and approvals of VaproShield details are the sole responsibility of the designer/consultant of record. VaproShield is **not** the designer of record for building enclosure details and takes no responsibility for the accuracy or interpretation of actual project site conditions.

DRAWN BY: AR                      DATE: 11/2024

REF: 340                                      Always check [www.VaproShield.com](http://www.VaproShield.com) for the latest details and installation instructions